

QUICK INSTALLATION GUIDE

Lithium Series 48V 5.1kWh Slim

+

VICTRON INVERTER



+



1. INVERTER VICTRON configuration


The configuration between the inverter and the battery is quite simple. In fact, to facilitate the control and operation of the installation, a device called **COLOR CONTROL GX** is used.

The connection of the communication is made between the master battery and the Color Control, and from the Color Control to the inverter.



2. Configuration Lithium Series 48V 5.1kWh Slim

Each module has 4 DIP (Dual Inline Package) switches that will be configured differently depending on the number of batteries to be connected

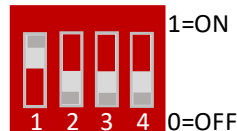

Address	Dial switch position				Explain
	#1	#2	#3	#4	
1	ON	OFF	OFF	OFF	Pack1/Master
2	OFF	ON	OFF	OFF	Pack2
3	ON	ON	OFF	OFF	Pack3
4	OFF	OFF	ON	OFF	Pack4
.....					

3. Wired configuration



The cable needed to make the connection is the RJ45. It is a special cable that is composed of 8 smaller cables each with a different color configuration. The battery includes inside the connection cable with the inverter. The cable is included inside the battery box.

